






BLUETOOTH EYE MASK

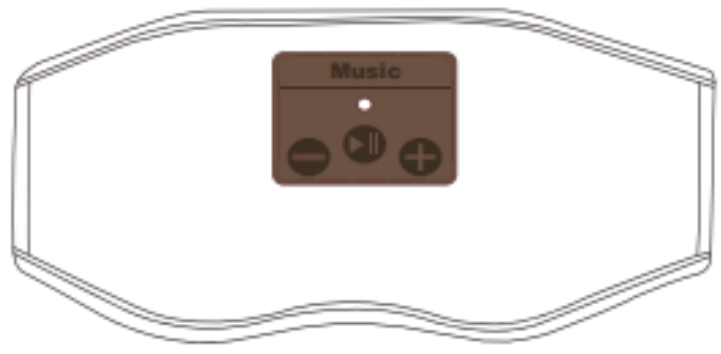

x1

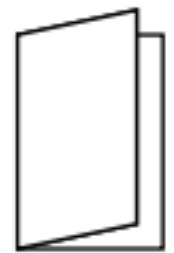

x1

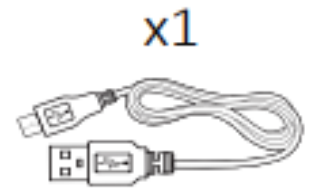


x1


Specifications

- Bluetooth Version: 5.0 + EDR
- Frequency:2.402 Ghz-2.480 GHz
- Standby time: up to 120 hours
- Music playing time: up to 10 hours
- Transmission distance: 15 m(45ft)
- Battery: Li-ion 3.7V/180mAh
- Charging time: 2 hours
- Talking time: up to 12 hours
- Materials:5% spandex, 75% polyester
20% polyurethane

Turning On/Off Bluetooth Eye Mask

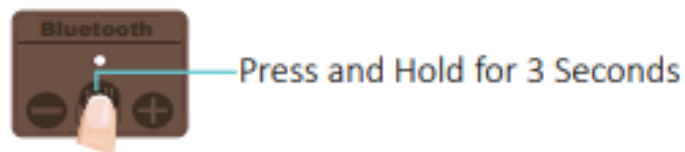


At a Glance

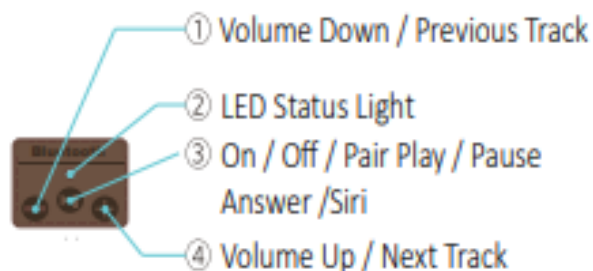


Pairing Bluetooth Eye Mask

1 Turn on Bluetooth Eye Mask

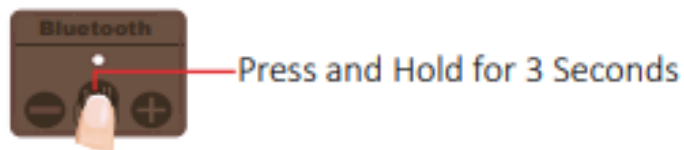


2 Turn on Bluetooth on devices

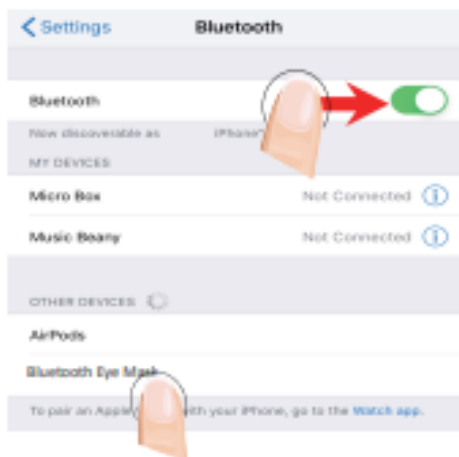








3 Connect to Bluetooth Eye Mask on devices



LED Status Color	Meaning
Rapidly flashing blue and red	Pending to be Paired
Slowly flashing blue	Connected to a device

 When turned on, the Bluetooth Eye Mask will automatically connect to the last connected device if available. If no previously paired device detected, it will keep pairing mode.

Control

Power On/Off	 >3s	Press and hold for 3 seconds
Play/Pause Music	 x1	Press once when connected to a device
Volume Up/Down		Press and hold during music playing
Next Track	 x1	Press once during music playing
Previous Track	 x1	Press once during music playing
Answer/End Phone Call	 x1	Press once when phone ringing
Siri	 x2	Quickly press twice

Precautions

- Do not expose Eye Mask to liquid or moisture.
- Do not attempt to tamper with Eye Mask by dropping, disassembling or opening.
- Remove the Bluetooth module before washing the Eye Mask.
- Keep the Eye Mask away from fire.
- Do not store the Eye Mask near acidic or alkaline material

Warranty

12-Month Warranty and friendly customer service.

After the electronic device is completely removed: Hand wash, air dry (do not dry)

Not machine washable

FC RoHS CE 
Made in PRC

corpos
healthcare